


DOUBLE LOCKING NIGHTLATCH


To fit the Double Locking Nightlatch, the following tools are required – a drill, 32mm drill bit, rule, hacksaw, mallet, chisel, posidriv screwdriver and pencil.

Easy Fitting Guide


Note: Fitting instructions apply to both 40mm and 60mm products.

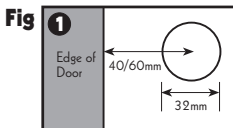

- A** Remove mounting plate from lock body by unscrewing the 2 retaining screws. Select desired height for lock. Mark lock position 40/60mm from edge of door. Drill a 32mm diameter hole through door. **Fig 1**

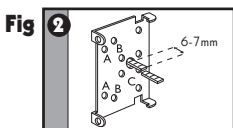

- B** With the key removed, insert cylinder and rose from outside of door. Hold mounting plate against inside of door. It may well be necessary to shorten flat connecting bar. **Care must be taken when cutting flat connecting bar to the correct length.** To do so, measure between 6-7mm beyond surface of mounting plate, and mark flat connecting bar. **Fig 2**

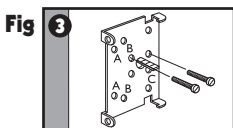


- C** Remove cylinder and using hacksaw, saw off excess bar. Re-insert cylinder and holding plate against door, insert connecting bolts through mounting plate top centre holes into cylinder. Do not over tighten bolts. **Fig 3. NOTE:** For doors less than 45mm thick, connecting bolts need to be shortened using hacksaw.


- D** Using the 4 wood screws provided, fix mounting plate in positions A & C, allowing 4mm clearance from edge of door, ensuring mounting plate is parallel with door edge. It may be necessary to loosen connecting bolts to achieve clearance. Ensure bolts are secure after fixing mounting plate.

NOTE: When fixing mount plate, if holes A are not suitable due to previous holes etc, fix plate using positions B.

2mm diameter pilot holes may be necessary in hardwood doors.

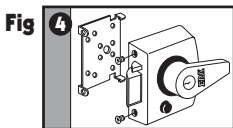

- E** Locate lock body over mounting plate and slide lock to engage locking pegs, ensuring lock face is flush with door edge. Secure lock using the 2 retaining screws. **Fig 4**

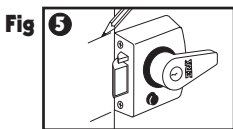

Fitting the Staple

Close door and mark position of staple using lock as guide. **Fig 5**

Mark area of wood to be removed from door frame and drill out so that the staple fits flush with door frame. Fix staple with screws provided, drilling pilot holes if necessary.

Reduce the risk with ERA PRODUCTS LTD

TECHNICAL HELPLINE
01922 490 050

Call 01922 490000 for your FREE brochure
www.era-security.com